

Thank you for choosing a Berman Safe - FS Series. Before operating your new safe, please read the user manual to ensure optimum performance.

1. FIRST TIME OPENING THE SAFE

- Lift the bottom of the square plate (plate P on *Diagram 1* shown below - next to the fingerprint sensor), then the top, to remove plate.
- Insert the key into the lock and turn clockwise to open the door.



Diagram 1

2. INSTALLING THE BATTERIES

The safe requires 4 AA (1.5V/LR6) batteries (included). Remove the battery cover (located on the inside of the door) and install the batteries into the compartment. Make sure that the batteries are fitted in the right position to match the polarity. Close the battery compartment.

Use of alkaline batteries is recommended.

3. PROGRAMMING YOUR FINGER

The safe can be opened by any finger that has previously been setup. To register your finger:

- With the door open, press the green button located on the top of the door. The front light will turn yellow and the fingerprint reader is ready to capture.
- Place your finger on the fingerprint reader within 5 seconds. Please register the same finger three times. When the front light turns green, your fingerprint has been successfully registered.

If the light turns red and you hear 3 beeps, the registration failed. Please try again.

IMPORTANT:

- To enhance the fingerprint identification rate, we recommend the same finger is programmed 3 or more times, from different positions, as shown in *Diagram 2* of the user manual.

- We also suggest that you register 2 fingers for each hand programmed.
- To avoid fingerprint reading failure, we recommend cleaning your finger with a dry cloth before placing it on the reader. Also, keep the reader clean from grease and humidity.
- Always keep your finger steady and press your fingertip when scanning.
- The little finger is not recommended to be used for fingerprint identification.
- Avoid bright lighting exposure on the top of the fingerprint reader.

NOTE:

The safe can record up to 100 fingerprints.

4. USING THE SAFE

To open the safe:

- Press the button located on the right side of the fingerprint reader. The yellow light will turn on, indicating that the reader is ready to operate.
- Place your registered fingertip on the fingerprint reader within 5 seconds. If the fingerprint is valid, the light will turn green and the door will open automatically. If the authentication fails, the light will turn red and you will hear 3 beeps.

To close the safe:

Close the door and press the button to the right side of the fingerprint reader. The door will lock itself automatically.

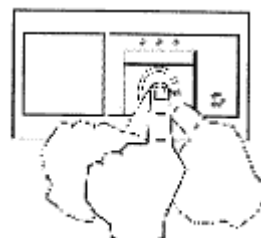


Diagram 2

IMPORTANT:

The safe can only be operated using the same locking system. For example, if you opened the safe electronically, you need to lock it the same way. And if you opened the safe with the key, it should be locked with the key as well.

5. DELETING ALL FINGERPRINT RECORDS

While the safe door is open, press the red button located on the top of the door 3 times in a row. If the light on the front turns green, all the fingerprint records have been deleted.

6. REPLACING THE BATTERIES

The safe requires 4 AA (1.5V/LR6) batteries.

Open the safe, remove the battery cover and replace the batteries inside.

7. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system to open the safe. In case of emergency, remove the plate P (*Diagram 1*) as explained on Step 1, insert the key and turn clockwise. This will manually open the safe.

CAUTION:

Do not keep the keys inside the safe.

8. INSTALLING THE SAFE

To help reduce the risk of theft, we suggest that your safe is securely fixed to a wall or a floor. Please use the provided bolts to fix the safe horizontally.

For your convenience, the safe has pre-drilled fixing holes at both the bottom and at the back. Please fix the safe according to the steps on *Diagram 3*.

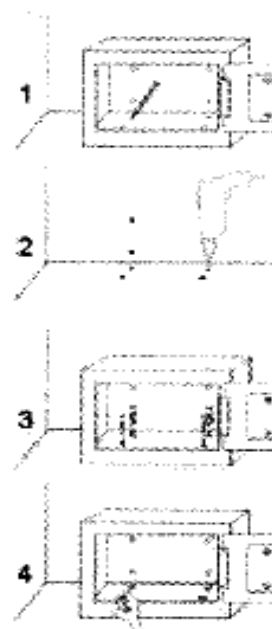


Diagram 3

9. CARE AND MAINTENANCE

Keep the safe between 40°F and 110°F. Avoid using in damp conditions.